



If the cover coating of the paint is damaged during installation, it may be repaired by spraying the spray paint defined by the producer or distributor.  
In the first heating process, it is necessary to ventilate the room.